

**YOUR COMPETITORS ARE CARRYING CDSAVER!
SHOULDN'T YOU?**

CD SCRATCH REMOVER

NEW!
ONE-STEP REPAIR



**Simply pour on
and wipe off**

**RESTORE DVD's & CD's
Video – Music – Games**

- *Simple, easy to use*
- *No waxing or grinding*
- *No expensive machines required*
- *Lowest cost per CD*

Takes the Skips Out!

CDSAVER®

**Call Now! Toll Free
1-866-CDSAVER**

fax 860-664-9542
info@cdsaver.com
www.cdsaver.com

1-866-237-2837



What our customer's say:

Best formula on the market! More effective than that \$50 grinding and polishing machine.
 Sony BMG Music Distribution – Bill Murrett, Regional Sales Manager

If we had a 55 gallon drum of CDSAVER, we could sell it all day... works great and we can't stock enough!
 Transworld Entertainment Bob Adams – Store Manager

...works great on DVD's We have decided to sell CDSAVER exclusively.
 Tommy K Video – Frank Slugaski – CEO

We sell more CDSAVER than any other CD scratch remover product.
 The countertop display at the cash register is a real plus. When customers see it, they add it to their shopping cart.
 Music Box Pam Cohn- Owner

We prefer CDSAVER over any of the other CD repair products on the market ...easy to use, works very well, and is priced right!
 Merle's Record Rack Rob Stein- Store Manager

We put CDSAVER in several of our stores. It really works!
 You really have something here!
 Action Music Distributors John Awariski –Vice President

We have tried many different products and this stuff (CDSAVER) is truly impressive! It is all we stock now.
 Music Planet Curtis McWright – Store Manager



POP display located at checkout counter



Restore Scratched DVD's & CD's!

CLEAN, RESTORE, & PROTECT UP TO 50 CD'S – ALL DISC FORMATS

ABOUT CD'S

A Compact Disc consists of clear protective, digital data, and reflective layers. Most scratches are in the clear protective layer and can be repaired by CDSAVER®.

HOW CDSAVER WORKS

The wall of a scratch is white and obstructs laser light transmission. CDSAVER is a special-formula conditioner that clarifies and coats the wall to allow clear laser transmission. Although the scratch may be visible to the eye, optical laser transmission of digital data is restored through the previously scratched surface. CDSAVER® CLEANS and RESTORES your CD's to like new condition.

DIRECTIONS FOR USE

Simply pour a few drops of CDSAVER® on the surface of the CD and spread with fingers or soft tissue. Allow to set for 60 seconds. Rinse with warm water and air dry. (A soft tissue may be used to remove solution if water is not available).



Available in individual package for rack hanging or in shelf display pack of twelve